



Separate each Bracket (B) into 3 parts by removing the Set Screw (B3) on the bottom of the Bracket. You will now have an Upper Half (B1), Lower Half (B2), and the Set Screw (B3).

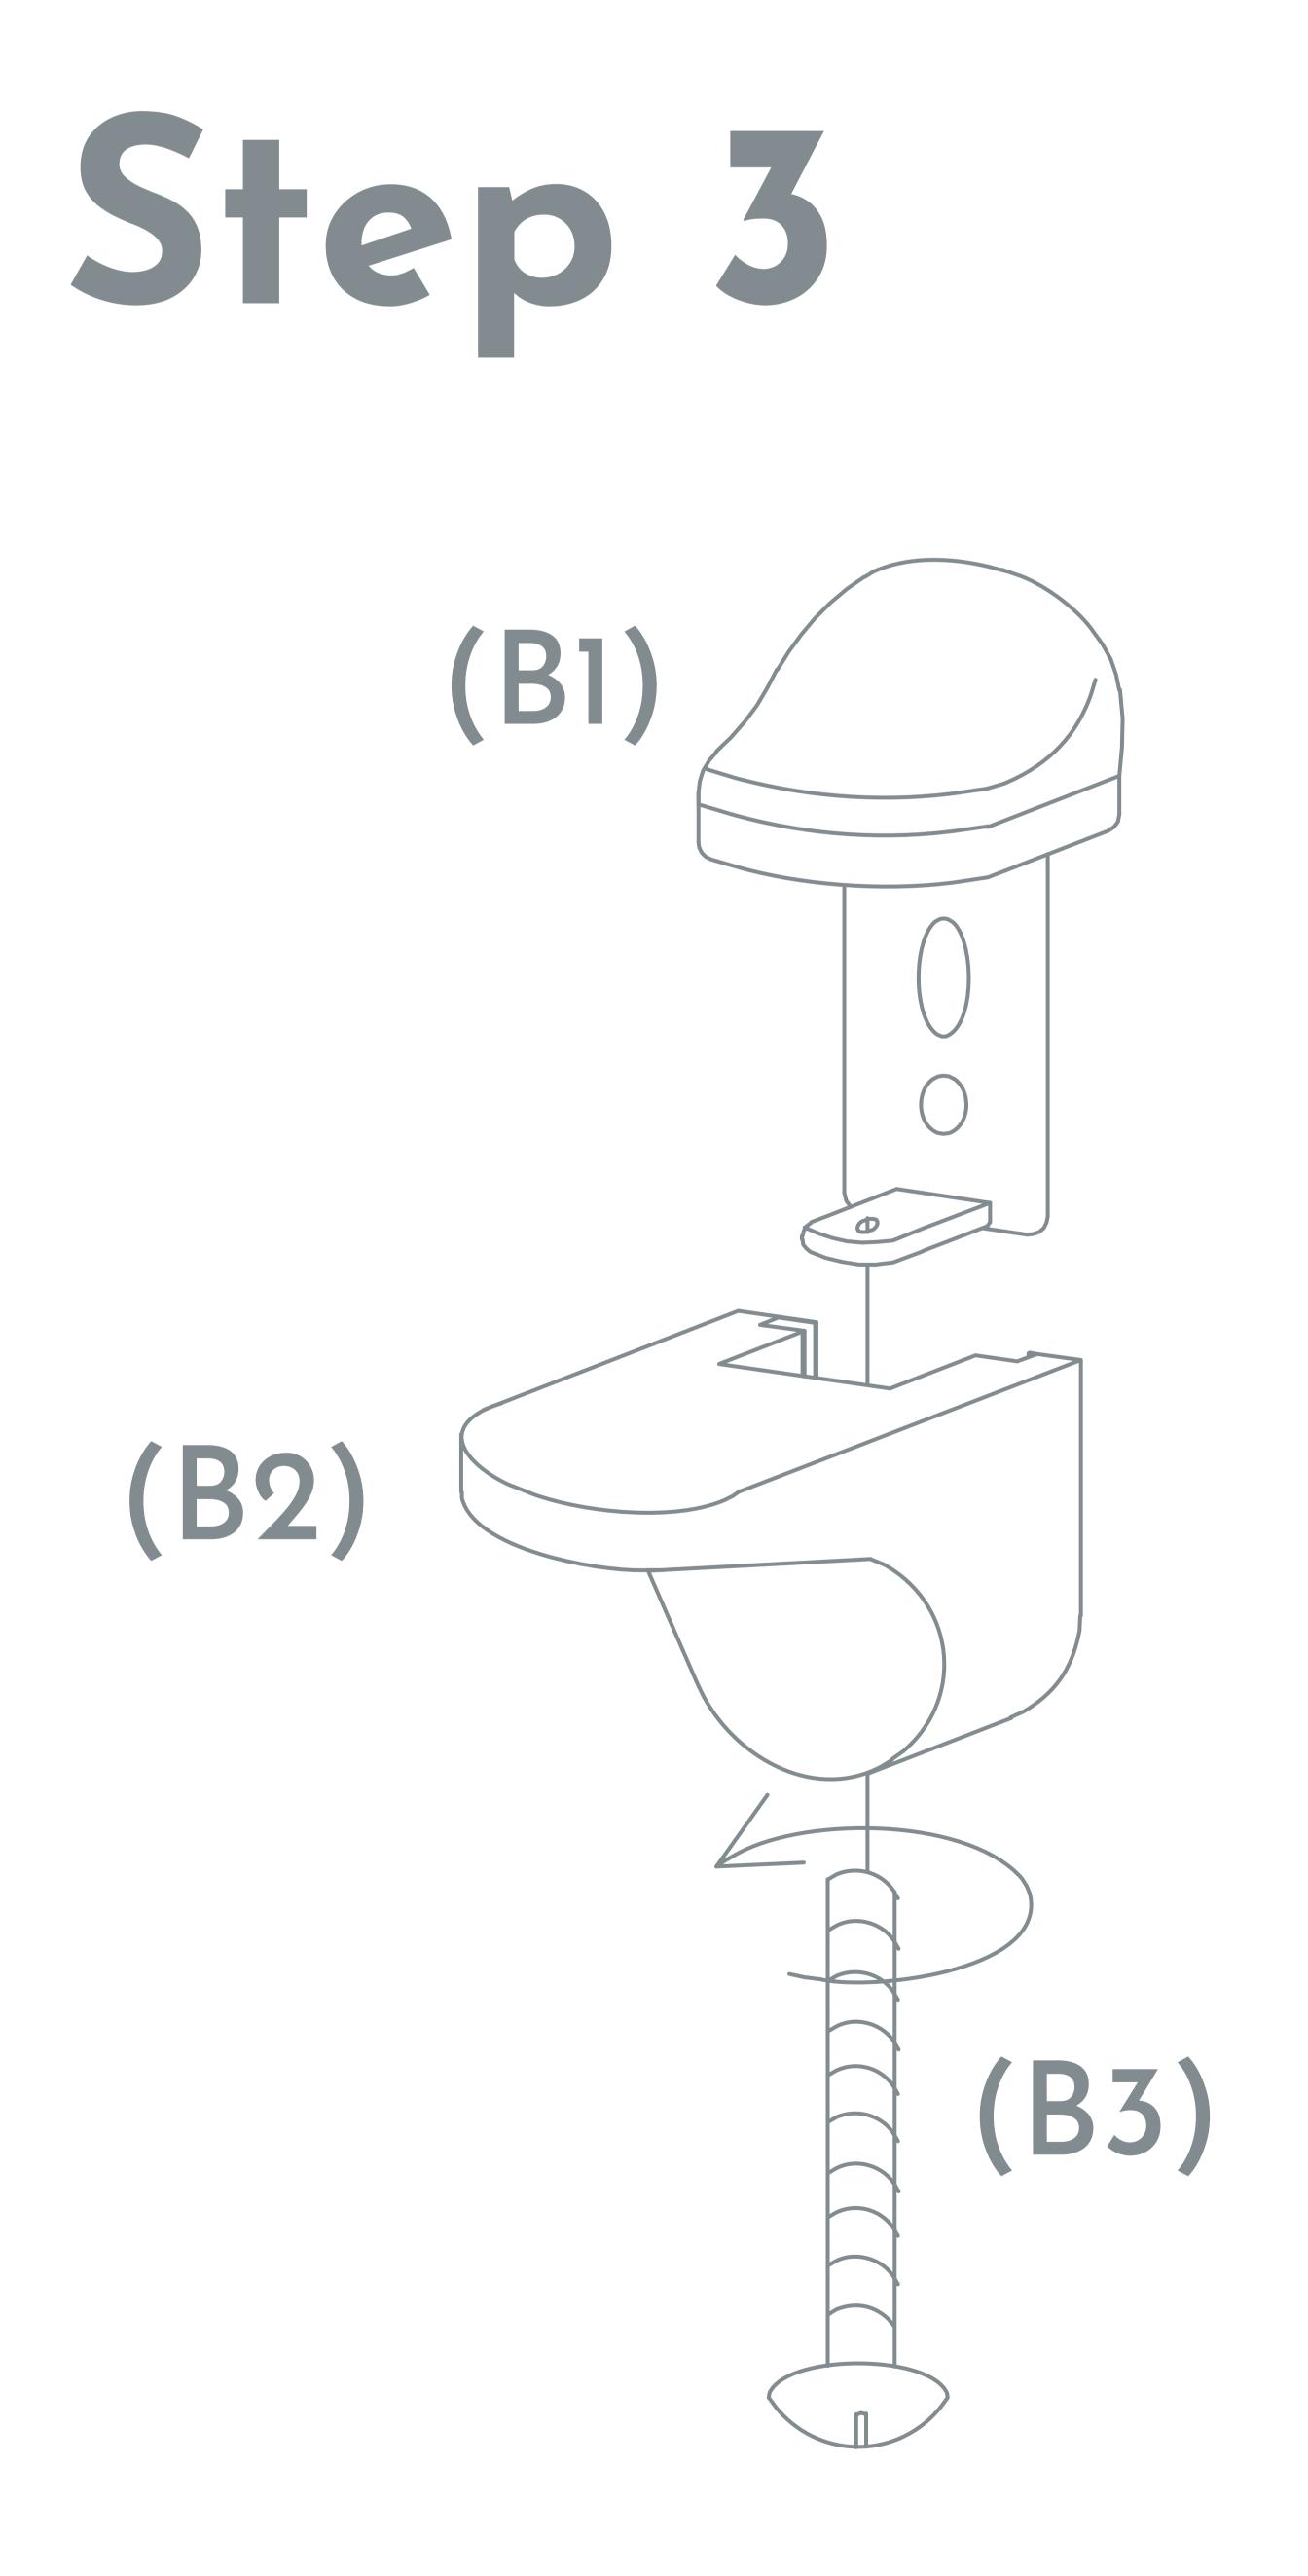


Partially attach the Lower Half (B2) bracket to the Upper Half (B1) bracket using the Set Screw (B3).

## Step 2

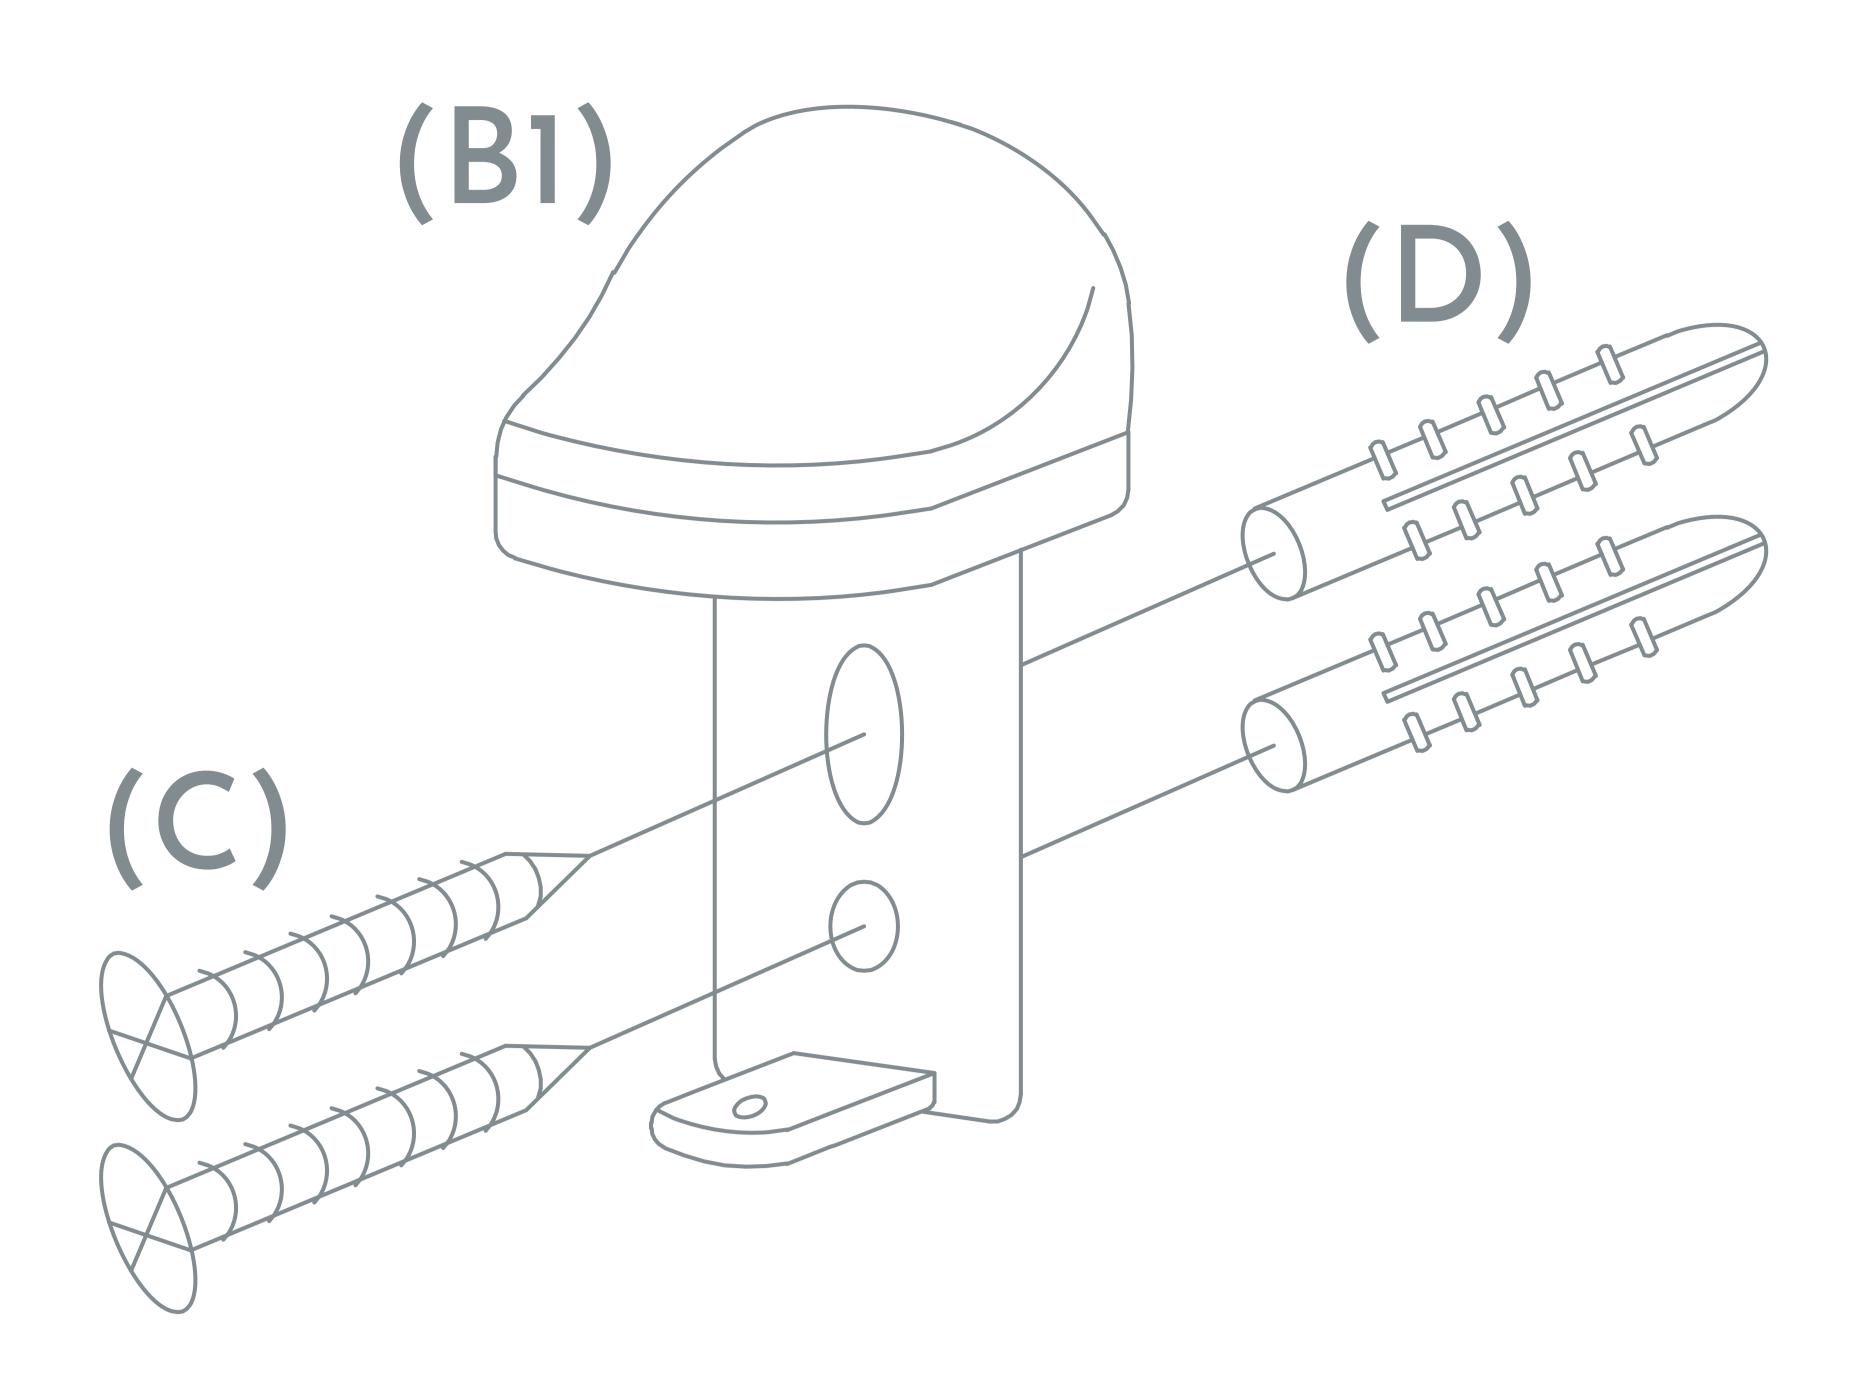

Drill pilot holes into wall for each bracket. Approximately 20" between brackets. Tap Anchors (D) into wall. Attach Upper Half (B1) of bracket to the wall using the included Screws (C).

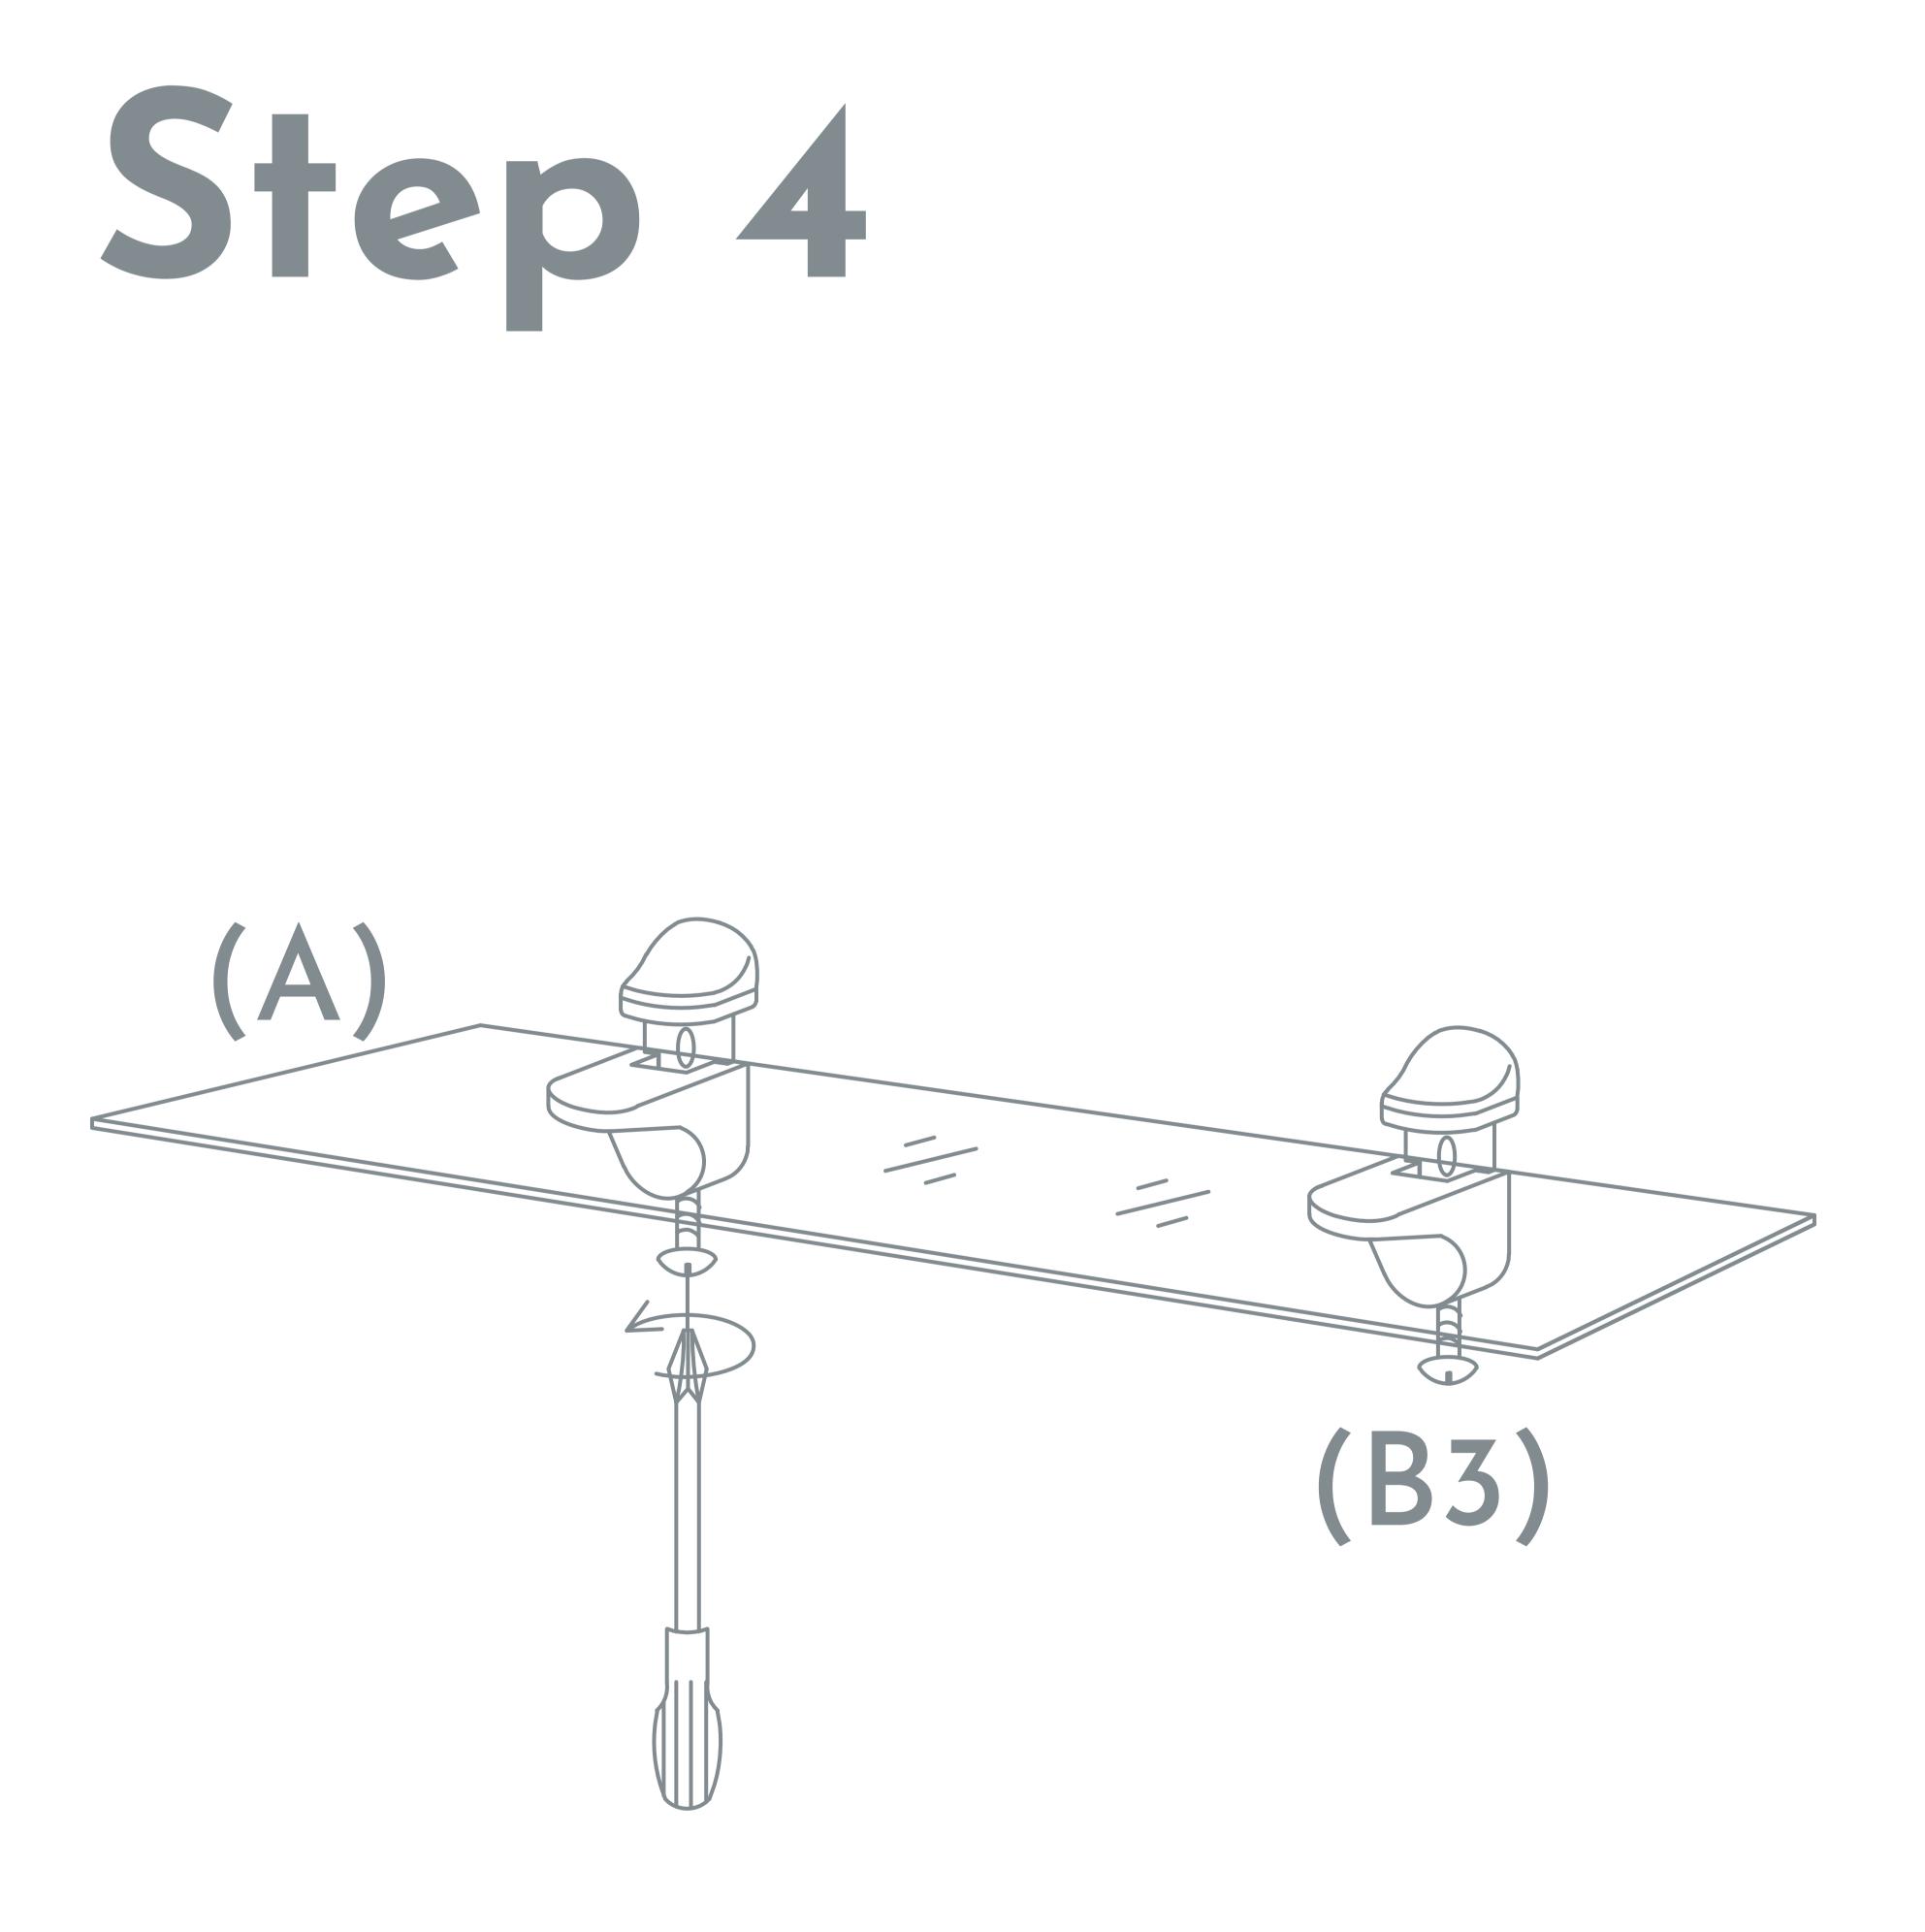

Slide Glass Shelf (A) into place and tighten Set Screw (B3). That's it!